A.1. Cache Storing Specification Change

Starting with PFV4.0.6.0, cache data is stored in the PC to speed up the startup process.

Target model

PFV (SDK): Ver. 4.0.6.0 or later Camera: Nova S/R series, Mini R5, MH6, and cameras to be released in the future

Expected Benefits

Faster connection between PFV and camera

When connecting to a camera, correction data was loaded from the camera.

This loading process took a long time for the connection.

By storing the cache data in the PC, the data loading time from the camera can be reduced and the connection speed can be improved.

Storring Location

Cache data is stored in the following folder.

C:\Users\User Name\AppData\Roaming\Photron\PDCLIB\Devices\Camera Name\XXXXXXXX

- * "User Name" is the user's local folder name.
- * "XXXXXXXX" is a non-duplicate alphanumeric string based on camera and head information.
- e.g. C:\Users\User Name\AppData\Roaming\Photron\PDCLIB\Devices\Nova S12\978C95093DC3BC7EDAEAFEAB771CA6F2

Contents of Data

Cached data includes camera correction data (pixel gain, shading, and missing pixel).

Details

The camera's MAC address (Serial number) is used to link to the cached data.

As long as there is no camera with the same MAC address (Serial number), incorrect (from another camera) data will not be linked.

🗘 CAUTION

When a camera is returned to Photron for maintenance or repair and the camera's image quality is readjusted, the cache data remaining on the PC must be deleted so that the old cache data is not referenced. See "How to Delete Cache Data" on page 12 for detailed instructions.

* If the camera is connected without deleting the old cache data, the camera will use the old correction data before image quality readjustment for its operation. In this case, the correction data inside the camera will not be overwritten.

How to Delete Cache Data

- If using PFV4, do A), B), or C).
- If using SDK, do C) or D).
- A) Initialize the camera from PFV4 to factory settings (after connecting the camera).

Configuration	Confirmation ×		
Connection Image Quality Trigger Record Save I/O Camera Option Display Alert Preference	Camera Option Camera settings Camera Frame rate mode 20KMode Fan control Stop fan during waiting trigger and re Factory default settings Restore factory default settings 3 OK Cancel Apply	The camera will be reset to the factory default settings when it is disconnected. After disconnecting the camera, please wait about 20 seconds before turning it off. After that, please restart the camera. (Some models of cameras will be restarted automatically.) The factory default settings will be applied to the following camera. Camera_1 Do you want to proceed? 2 Yes No	

B) Perform PFV4 reset (before connecting the camera).

Configuration					
Connection	Preference	Preference			
Image Quality Trigger Record Save	System settings Automatically hide panels Hide function panel Hide playback panel				
1/0	- Unit				
Camera Option Display	 USCS SI Distance 	Millimeters (mm)			
Alert	Speed	mm/sec	-		
Preference	Angle	degrees Angle Display 💿 Narrow a	angle		
	Zoom window customiza	ation	fde ave e ét		
	Zoom ratio 400%				
	Size of zoom frame	tandard 🔹			
	Reset all settings to default 1 Reset				
	2 OK Ca	ncel Apply			

- C) Delete cache data directly in the AppData folder (before connecting the camera).
 C:\Users\User Name\AppData\Roaming\Photron\PDCLIB\Devices\Camera Name\XXXXXXXX
- D) Execute the SDK function "PDC_EraseCachedCorrectionData()" (before connecting the camera).
 For details, refer to the SDK Help file.